

How to change KV controls from one side to the other







Remove 2 screws (each side of heat shield)



Remove heat shield and set aside (high limit wire remains attached)

High limit shield

High limit wire




Remove 2 screws from panel located under controls and remove from heater



Slide high limit wire from current side to the other side of the control column



Put heat shield in place on the back side (originally front side) of the heater. Attach screw at each side of heater.

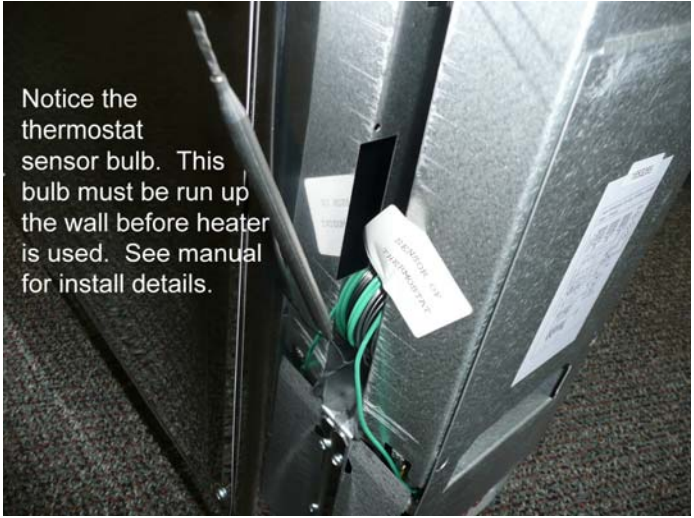

Notice the thermostat sensor bulb. This bulb must be run up the wall before heater is used. See manual for install details.





Place excess high limit sensor wire inside the control panel column. Do not kink the wire.



Slide control panel cover back in place and reinstall the 2 screws



Slide heater bracket into slots on back side (previously the front side) of the heater



Bracket tab slides up and in the slot. It may be a snug fit.

This notch has to get past the bottom of the slot.



Bracket is in place



Screw bracket to black mounting plate (2 screws)



Controls have now been reversed to the opposite side of the heater